


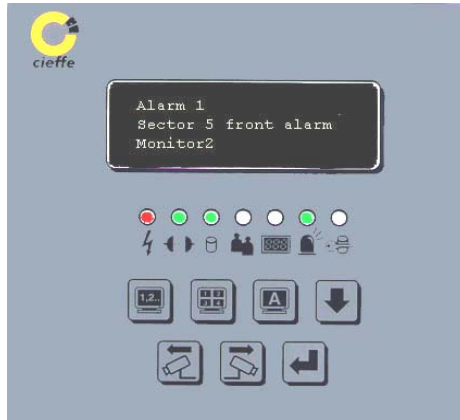



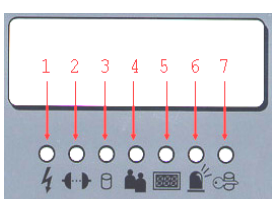


HOREMPA


Keyboard for Spot Monitor output management.

Control panel

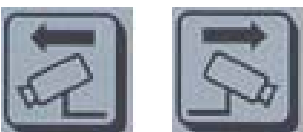

HOREMPA	TYPICAL ANSWER	NOTE
	Select monitor to manage.	
	Select viewing mode for selected monitor (camera 1, 4, 9, 16).	Attention – Available only on multiplexed output.
	Change between manual mode and automatic mode.	
	Show display lines to view information.	
	Change camera in single mode viewing. (previous or following camera)	Note – Left button is also use to change between automaitc to manual mode.
	Manage alarm showed on display.	
	Led indicator: <ol style="list-style-type: none"> 1. Power present. 2. Connection on server enabled. 3. Server recording. 4. Remote connection on server enabled. 5. Messages on display. 6. Alarm enabled. 7. Stop recording enabled. 	

Connections

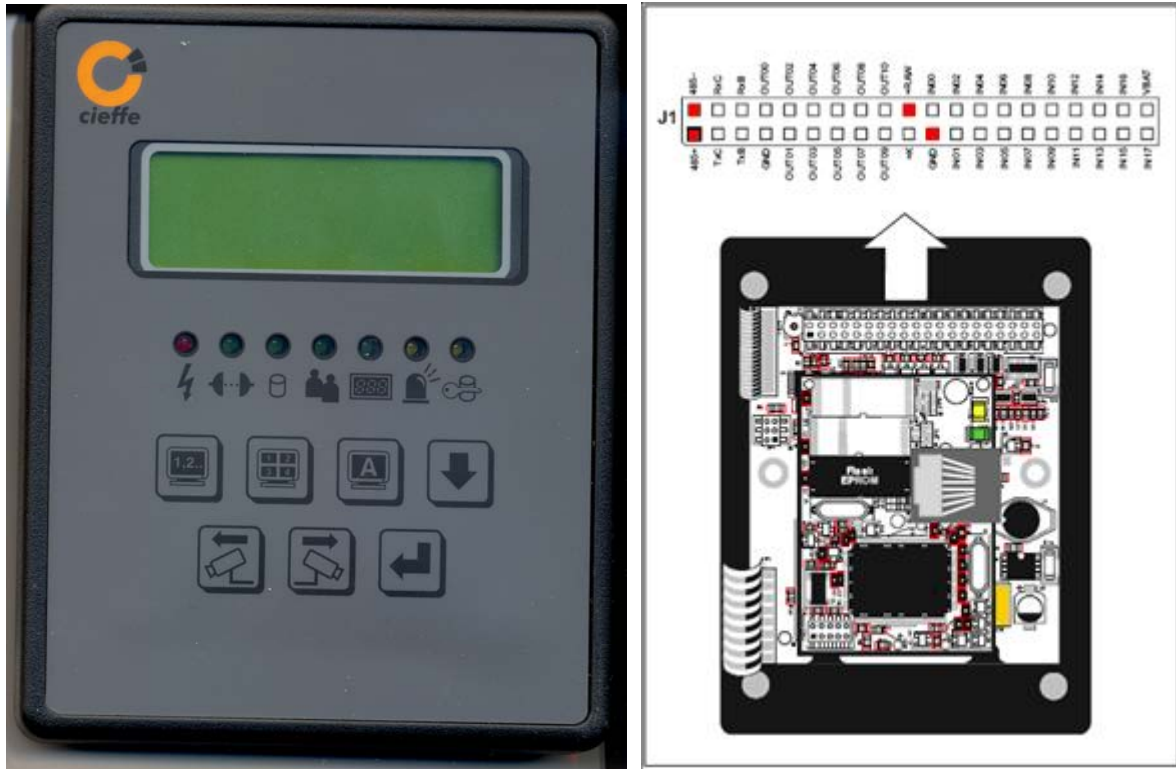


Pinouts connections:

- PIN 01 _ 485 +
- PIN 02 _ 485 -
- PIN 20 _ +12 V (+RAW)
- PIN 21 _ GND

Power is 12V – 1A

Desktop version

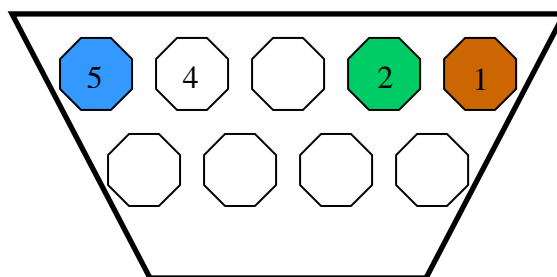

- | | |
|-----------------------|-------|
| PIN 01 _ 485 + | Brown |
| PIN 02 _ 485 - | Green |
| PIN 04 _ +12 V (+RAW) | White |
| PIN 05 _ GND | Blue |

Power is 12V – 1A