



# Creation PCut CT Range cutter setup.

**Firstly do NOT connect cutter to your computer until you have followed these instructions and successfully installed the Creation FTDI driver.**


1: Insert Creation CD into computer cd/dvd drive, you will be invited to browse the CD

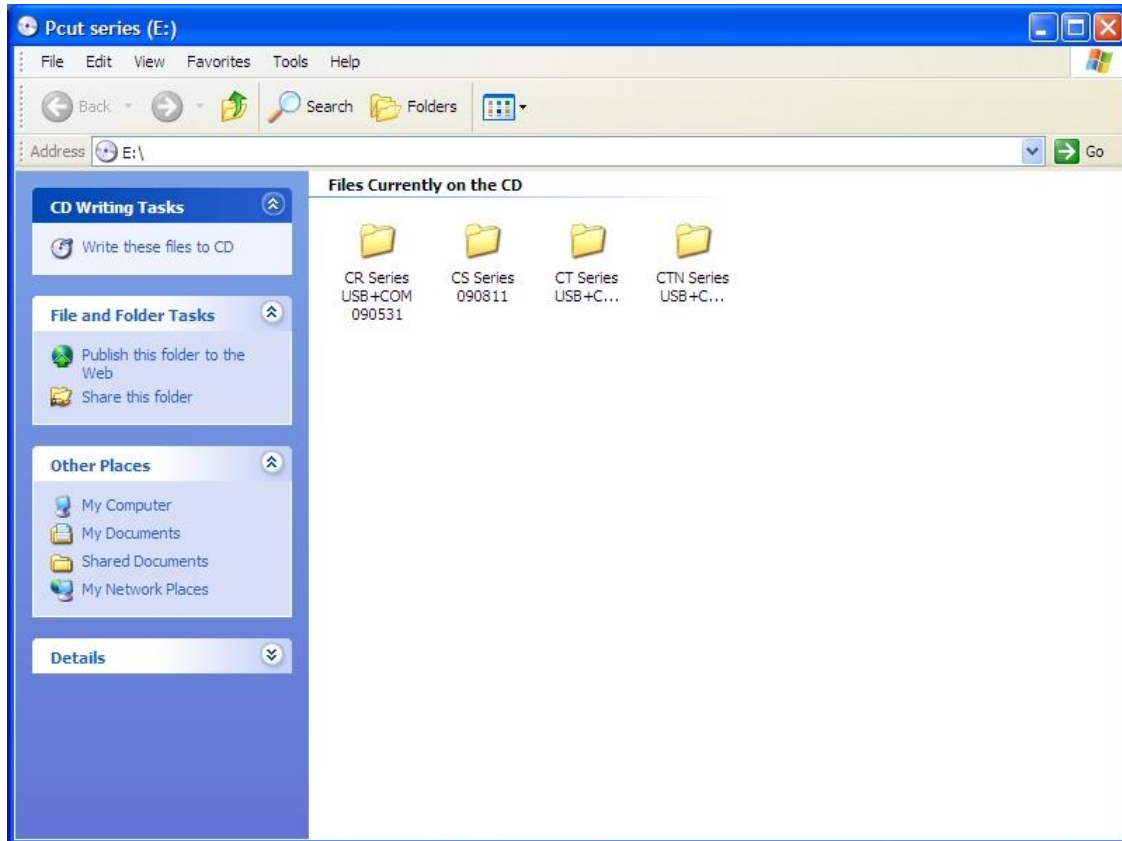

2: Select the CT or CTN folder then navigate to the CTN NEW USB DRIVERS.

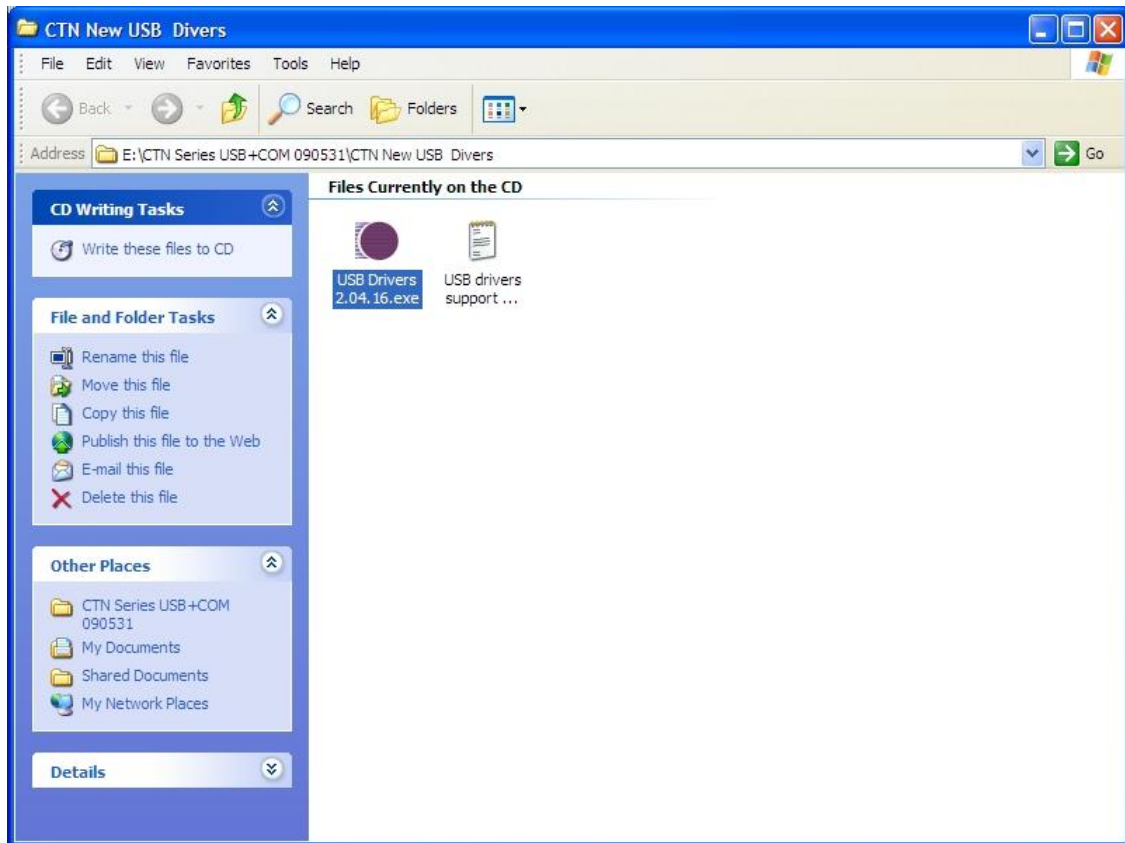


4: Double click on the USB Drivers exe file as above, this will install the Windows FTDI Chipset driver for your PCut. The screen below will appear for a while during the install.

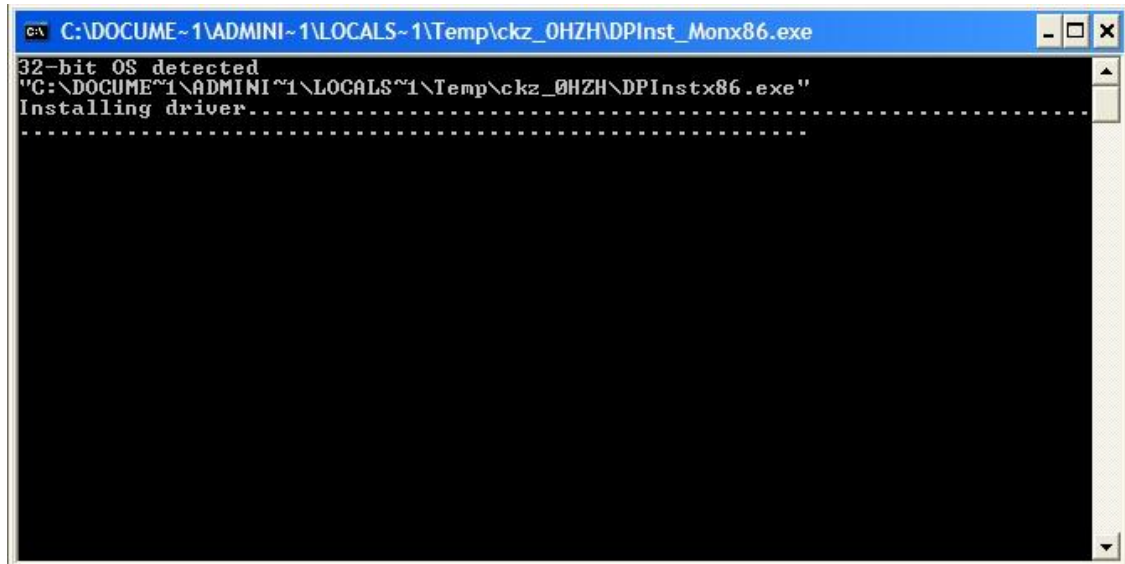



5: Now connect your PCut CTE630 to the mains and also the PC using the USB lead, turn the cutter on – wait for the ON LINE prompt to appear on the LCD display on the cutter.

6: Navigate through the Windows Control Panel > System> Hardware> Device Manager and check which port has been allocated to the cutter – even port numbers are best 2, 4, 6, 8.

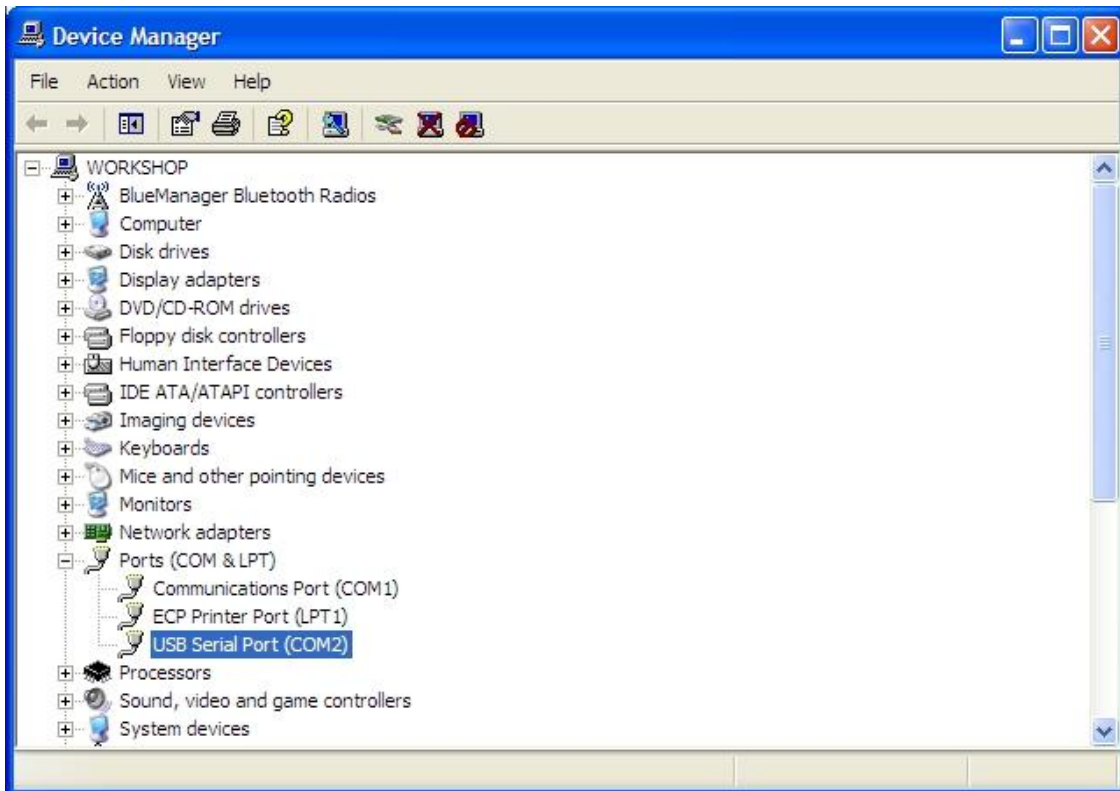



7: Check your settings as in the images below.

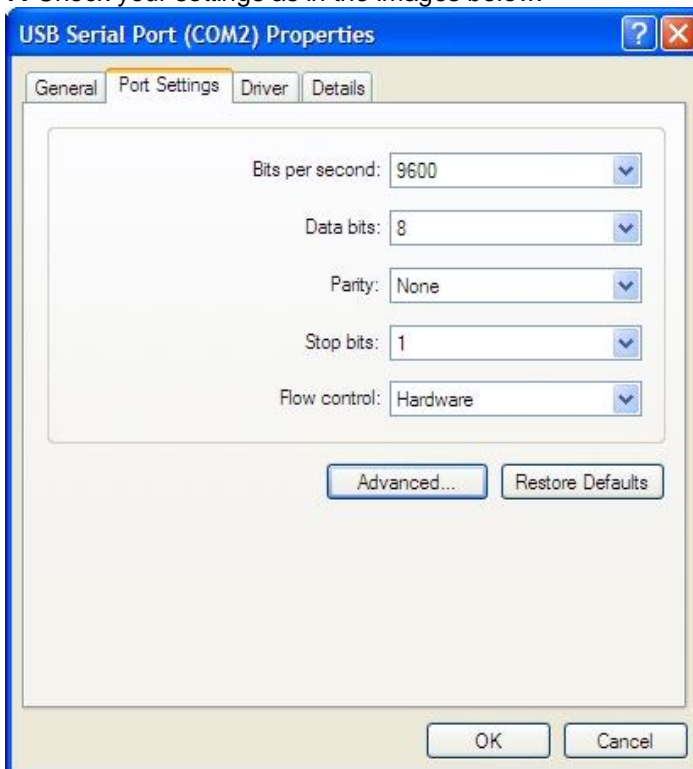

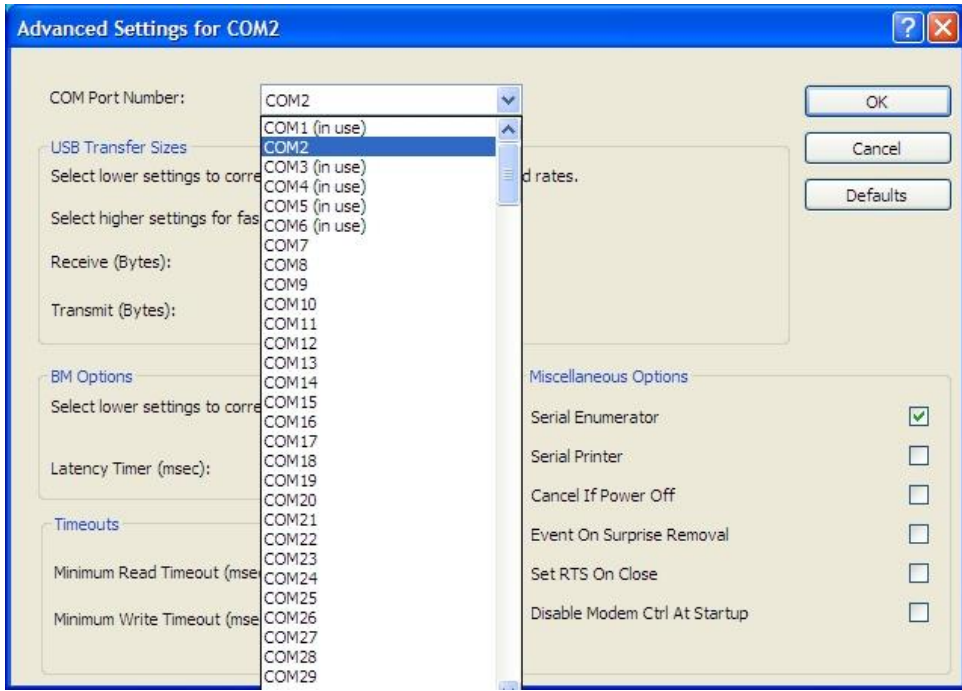

**8:** Finally check your settings in your cutting program, they should be identical to what you have selected above.

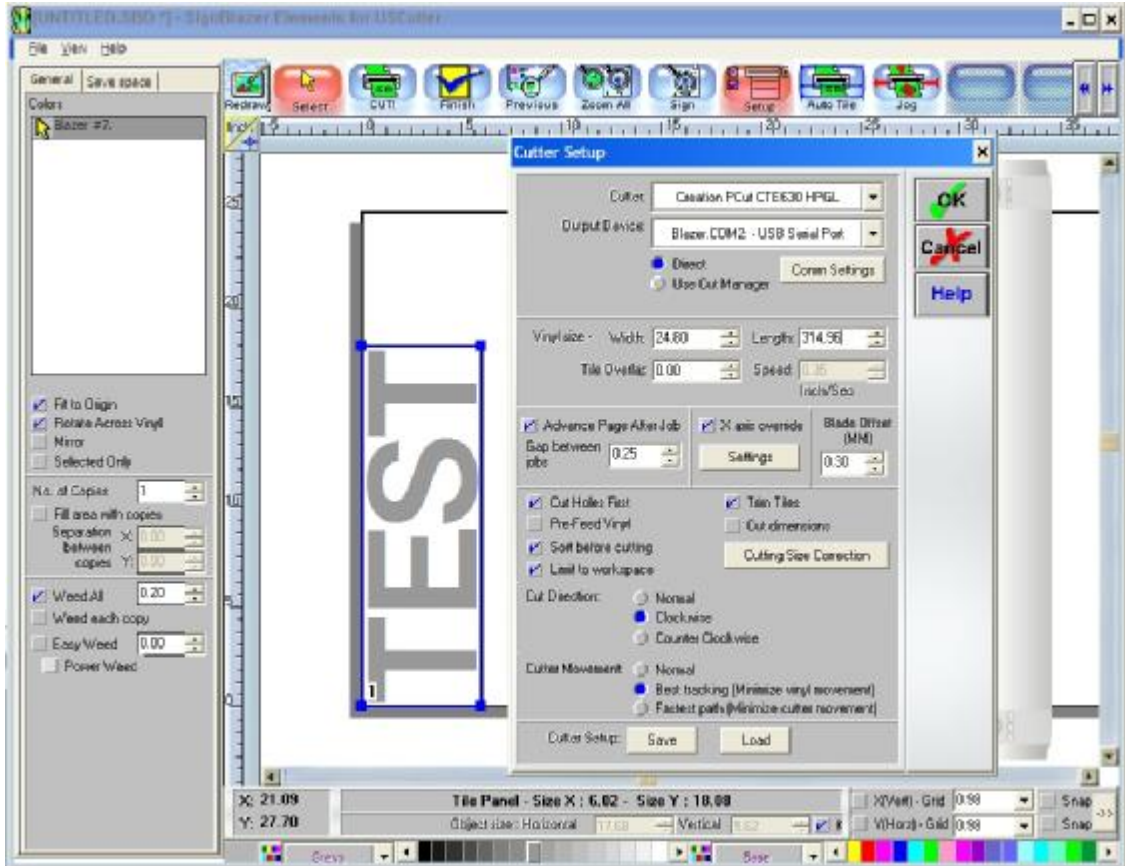

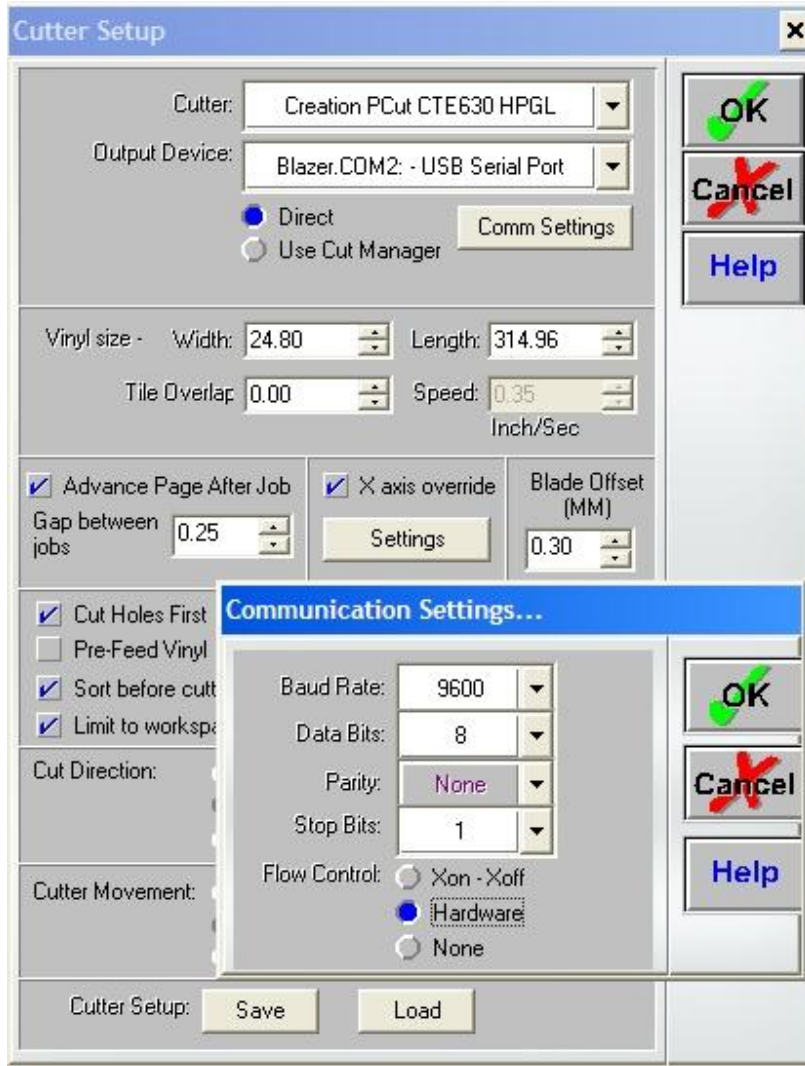

Finally create a job and run a test cut to ensure you have been successful in your install.

Good luck,