

IR-D8

INTERNET RADIO WIRELESS SPEAKER USER MANUAL

www.inscabin.com

Design by Locitech Group (Hong Kong) Limited
Assemble by Pingxiang Locitech Co., Ltd.
Warranty service E-mail: Service@inscabin.com

    **Made in China**

Important safety instructions

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Thank you for purchasing this inscabin product. For generations, inscabin tries to provide powered speaker products to satisfy the need of our end customers, even the most demanding ones. This product can add to your home entertainment, personal computer, and mini home theater great sound performance. Please read this manual carefully to obtain the best of this system.



The lightning flash with arrowhead inside the triangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.



To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable Parts inside. Refer servicing to qualified Service personnel only.



The exclamation point inside the triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Note: There is a built-in rechargeable lithium-ion battery in the speaker. Danger of explosion if disassemble the speaker. The speaker shall not be placed close to excessive heat such as fire or the like.

The battery shall not be exposed to excessive heat such as sunshine, fire or the like. Danger of explosion if the battery is incorrectly replaced.

Replace only with the same or equivalent type.



Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Desempaque la caja


Packing List



Internet Radio



Adapter

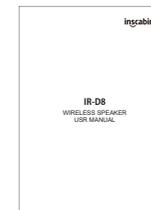

User Manual




Remote control



Audio cable

Specifications


- Power amplifier output power 8.0W (1KHz 0dB sine wave signal)
- Power amplifier signal-to-noise ratio: ≥ 70 dB
- Distortion: $\leq 1\%$
- Frequency response: 100Hz-18KHz
- Speaker: 77mm (4 ohms)
- Input power: 9V/1.3A
- AUX maximum input sensitivity: 800mv
- FM receiving sensitivity: -105dB
- Working environment temperature: -10 C ~ 50 C
- Storage temperature: -20 C ~ 70 C
- Product specifications: 220mm(W)*126.5mm(H)*96mm(D)
- Net weight: about 920g

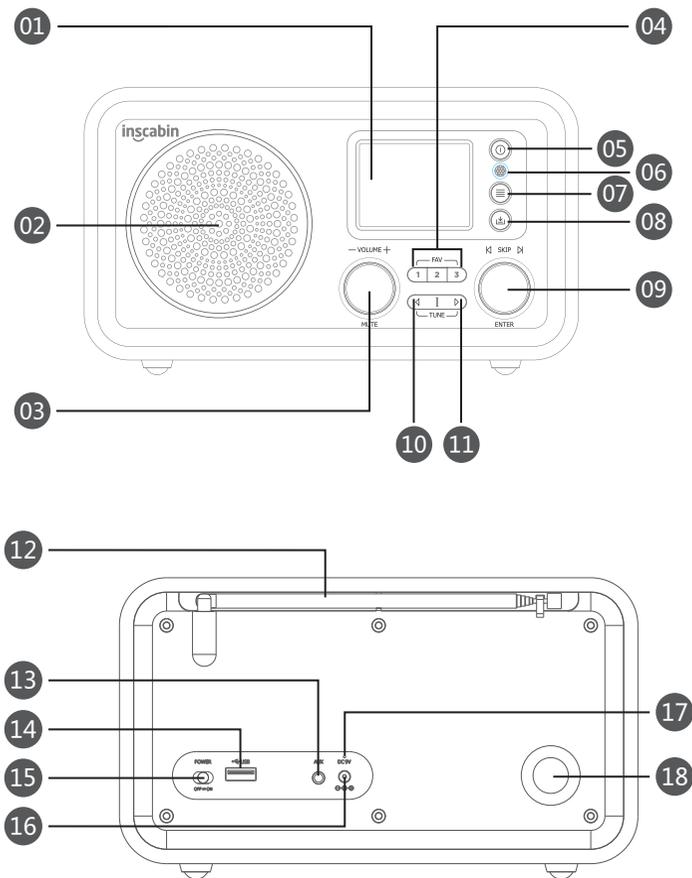

Product View

- 01 TFT display
- 02 Left speaker unit
- 03 Volume +/- knob
Rotate left and right: adjust the volume
Short press: turn mute on or off
- 04 FAV1,2,3 buttons
Short press to call up a pre-stored radio station and play it,
Long press to store the current station to 1/2/3 position
- 05 STANDBY button
Shutdown state: short press ON/OFF
Alarm sound: short press to cancel the alarm and enter standby
- 06 Remote control receiving port
- 07 MENU button
Short press to enter the main menu, long press on the main menu interface to switch between black and white/
color display, long press to enter the WPS pairing network state when in the "InternetRadio USB UPnP Local
Radio" mode.
- 08 PRESET button
Short press to enter the interface for recalling radio stations, and long press to enter the interface for
pre-stored stations.
- 09 SKIP+/- knob
Rotate left and right: move left and right
Short press: select to confirm
- 10 LEFT button
Short press: move left/return
- 11 RIGHR button
Short press: move right/forward
Products schematic back
- 12 Radio antenna
- 13 AUX audio input port
Connect to the computer through the audio cable provided
/Mobile phone or other audio equipment
- 14 USB input port
- 15 Power switch
- 16 Power input port
Power on through the supplied adapter
- 17 Power indicator
After the power is turned on, the indicator light is red,
- 18 Pilot hole

Front view of the remote control

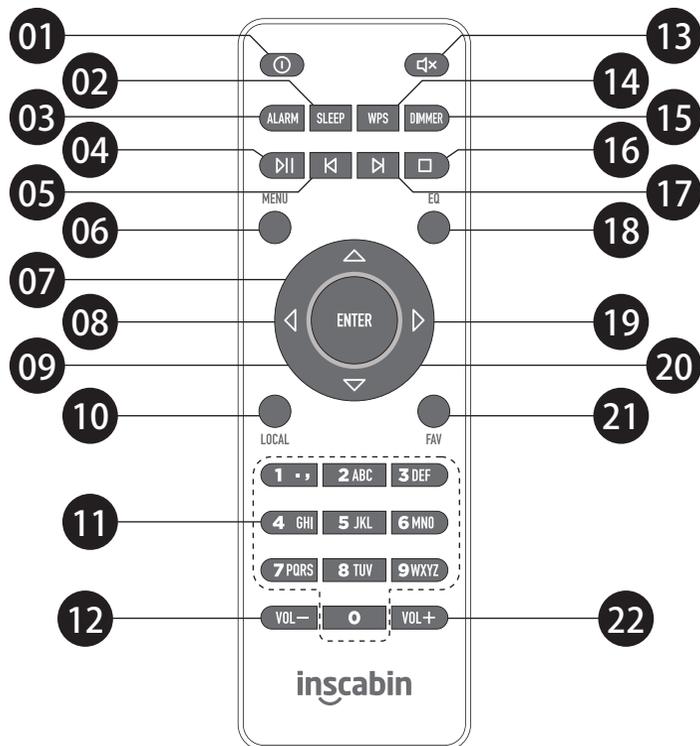

Front view of the remote control

Front view of the remote control

- 01 Short press to enter standby/function mode
- 02 Sleep button: Short press to set the Sleep time
- 03 Alarm button: Short press to enter Alarm setting
- 04 Short press the play/pause button
- 05 Previous song/Previous station
- 06 MENU button: short press to enter the main menu
- 07 Move up/increase FM frequency
- 08 Move left/return
- 09 ENTER button: short press to select and confirm;
- 10 LOCAL button: short press to enter "Enter Local Radio" mode
- 11 Number input button, short press for number input
- 12 VOL-button: Short press the volume to decrease
- 13 Mute button ON/OFF
- 14 WPS button: fast networking button, if the router has a WPS button, you can short press this button to quickly connect to the network
- 15 Brightness adjustment
- 16 Short press to stop playback
- 17 Next song/next station
- 18 EQ button: short press to adjust EQ
- 19 Move right/forward
- 20 Move down/decrease FM frequency
- 21 FAV button: short press to enter the interface of calling out radio stations, long press to enter the interface of pre-stored stations
- 22 VOL+ button: Short press the volume to increase

Turn On

After connecting the power, turn the power switch to ON, the screen will show the boot interface, and the machine will be turned on after about 30 seconds. The language will be selected for the first power on. There are 18 languages to choose from, turn the "SKIP+/- knob" to select , Short press "Enter" key to confirm.

Internet connection

After the language is selected for the first time, the "Privacy" interface will appear. Short press the "SKIP+/- knob" to enter the "Enable/Check Network when Power On" interface. Rotate the "SKIP+/- knob" to move as needed "Enter" key to confirm. Then enter "Would you like to configure Network now" and select "Yes". The machine will search for the nearby wireless network name, turn the "SKIP+/- knob" to move to the wireless network that needs to be connected, and short press the "Enter" key to confirm , Enter the "Enter Password" interface, turn the "SKIP+/- knob" to select the wireless network password. Left/right click to move. When the correct wireless network password is entered (you can use the 0-9 keys on the remote control to enter the password), Then short-press and short-press the "Enter" key to connect. After successfully connecting to the wireless network, you will enter the main interface. If the connection is not successful or you need to change the wireless network again, short press the "MENU" button to enter the main menu interface, turn the "SKIP+/- knob" to move to "Configuration" and short press the "Enter" key to enter. Turn the "SKIP+/- knob" to move to 'Nework' and short press the "Enter" key to enter. Turn the "SKIP+/- knob" to move to 'Wireless Network Configuration' and short press the "Enter" key to enter. After selecting 'Enable' to enter the machine, it will search for nearby wireless networks and display them, and then select the network that needs to be connected to connect.

Note: You can also connect to the WIFI network manually through APP and WPS; when connecting to the WIFI network through APP, the device and the machine must be in the same local area.

Internet Radio function

- ① Power on and press the "MENU" key to enter the main interface, turn the "SKIP+/- knob" to select the Internet Radio icon, and short press the "Enter" key to confirm to enter the Internet Radio mode.
 - ② Combine the "SKIP+/- knob" and "Enter" keys to select the option in the Radio Station submenu to play, for example, select: Radio Station/Country/Location/Asia/China/China/Top10 in the "AisaFM Network" network The radio station is playing. At this time, the machine receives the radio station information and displays it on the screen, and the short FM Network" Internet radio station is played. At this time, the machine receives the radio station information and displays it on the screen. Press the "Enter" key to pause the current The radio station is played and returns to the Internet radio station selection interface. Rotate the "SKIP+/- knob" to move up/down to select a radio station, and then short press the "Enter" key to play the current radio station.
 - ③ When in the music playing interface, short press the "RIGHT" button to enlarge the song picture information, and short press the "LEFT" button to return. Long press the "RIGHT/LEFT" key to switch the previous/next station to play. You can choose according to the Internet radio stations you like to listen to. Turn the "VOLUME+/- knob" to increase or decrease the volume, short press the MUTE key to switch the mute on/off.
 - ④ Long press the "PRESET" button to enter the radio station prestore interface, turn the "SKIP+/- knob" to move the prestore position forward or backward, and short press the "Enter" key to store the radio station to the current position. Short press the "PRESET" button to enter the tuning interface, turn the "SKIP+/- knob" to move the pre-stored position forward or backward, and short press the "Enter" button to recall the stored radio station for playback.
 - ⑤Note: In the network radio station name display interface, short press the "RIGHT" key to enter the radio operation interface: "Add to My Favorite, Auto Scan, Play".
When short press the "PRESET" key or "FAV" on the remote control to call up the radio interface, short press the "RIGHT" key to enter the radio operation interface: "Delete, Shift Up, Shift Down, Rename, Play".
- Remarks: 1. Every time the machine is turned on, the system clock is 00:00 and will not run. When connected

- to the network or FM radio, the machine will automatically update the time and the clock will start to run.
2. The machine system clock updates the time in the nternet Radio mode, the machine system clock will also update the time again in the FM mode, and the machine system clock will be based on the FM update time.
3. After using the network to update the machine system clock, you can manually set the system clock; if the FM mode is used to update the machine system clock, the manual setting of the system clock is invalid.

FM function

- ① Power on and press the "MENU" key to enter the main interface, turn the "SKIP+/- knob" to select the FM icon, and short press the "Enter" key to confirm entering FM mode.
- ② Rotate the "SKIP+/- knob" or short press the "RIGHT/LEFT" button to fine tune the radio station forward or backward, jump one step at 0.05MHz, short press the "Enter" key to enter the automatic station search interface, the screen displays "Auto Scan" , Rotate the "SKIP+/- knob, select "Yes", short press the "Enter" key to confirm, the machine will perform automatic search from 87.5-108.0MHZ and automatically save the searched stations. Long press the "RIGHT/LEFT" button to Search forward or backward semi-automatically for radio stations, but the searched radio stations will not be saved automatically.
- ③ Turn the "VOLUME+/- knob" to increase or decrease the volume. Short press the MUTE button to switch mute on/off.
- ④ Long press the "PRESET" button to enter the radio station prestore interface, turn the "SKIP+/- knob" to move the prestore position forward or backward, and short press the "Enter" key to store the radio station to the current position. Short press the "PRESET" button to enter the tuning interface, turn the "SKIP+/- knob" to move the pre-stored position forward or backward, and short press the "Enter" key to recall the stored radio station for playback
; Operate the number keys on the remote control to call up the pre-stored radio station.
- ⑤When this icon appears  in the lower right corner of the display, you can switch between WIFI network radio and FM radio by long pressing the "Enter" key.

AUX function

- ① Power on and press the "MENU" key to enter the main interface, turn the "SKIP+/- knob" to select the AUX icon, and short press the "Enter" key to confirm entering AUX mode.
- ② Turn the "VOLUME+/- knob" to increase or decrease the volume. Short press the "MUTE" button to switch mute on/off.

Podcast function

- ① Power on and press the "MENU" key to enter the main interface, turn the "SKIP+/- knob" to select the Podcast icon, and short press the "Enter" key to confirm to enter the Podcast mode.
- ② Rotate the "SKIP+/- knob" and "Enter" key to select the option in the Radio Station submenu to play, for example, select: "Franciacorta" Internet radio station in Country/Location/Germany/Arts/Weinstein-Podcast to play, The machine receives the radio station information and displays it on the screen, short press the "Enter" key to pause the current radio station and return to the Internet radio station selection interface, turn the "SKIP+/- knob" to move up/down to select a radio station, and then short press "Enter" key to play the current radio station.
- ③ When in the music playing interface, short press the "RIGHT" button to enlarge the song picture information, and short press the "LEFT" button to return. Long press the "RIGHT/LEFT" key to switch the previous/next station to play. You can choose according to the Internet radio stations you like to listen to. Turn the "VOLUME+/- knob" to increase or decrease the volume, short press the MUTE key to switch the mute on/off.
- ④ Long press the "PRESET" button to enter the radio station prestore interface, turn the "SKIP+/- knob" to move the prestore position forward or backward, and short press the "Enter" key to store the radio station to the current position. Short press the "PRESET" button to enter the tuning interface, turn the "SKIP+/- knob" to move the pre-stored position forward or backward, and short press the "Enter" key to recall the stored radio station for playback.
- ⑤ Note: In the network radio station name display interface, short press the "RIGHT" key to enter the radio operation interface: "Add to My Favorite, Play, Download". When short pressing the "PRESET" key or "FAV" on the remote control to call up the radio interface, short pressing the "RIGHT" key will enter the interface for radio operation: "Delete, Shift Up, Shift Down".

position. Short press the "PRESET" button to enter the tuning interface, turn the "SKIP+/- knob" to move the pre-stored position forward or backward, and short press the "Enter" button to recall the stored radio station for playback.

⑥ Note: In the network radio station name display interface, short press the "RIGHT" key to enter the radio operation interface: "Add to My Favorite, Auto Scan, Play". When short press the "PRESET" key or "FAV" on the remote control to call up the radio interface, short press the "RIGHT" key to enter the radio operation interface: "Play, Delete, Shift Up, Shift Down."

Bluetooth playback function

- ① Power on and press the "MENU" key to enter the main interface, turn the "SKIP+/- knob" to select the Bluetooth icon, and short press the "Enter" key to confirm to enter the Bluetooth mode.
- ② Use the mobile phone to search for the Bluetooth device, and then search for the Bluetooth device with "inscabin IR-D8" and click on the Bluetooth connection with "inscabin IR-D8", and you will hear "connected" and the machine display shows "Bluetooth Connected", indicating that the Bluetooth has been connected successfully.
- ③ Rotate the "SKIP+/- knob" or long press the "RIGHT/LEFT" button to next or previous song, short press the "Enter" key to play or pause. Turn the "VOLUME+/- knob" to increase or decrease the volume. Short press the "MUTE" button to switch mute on/off.
- ④ Since Bluetooth can obtain the picture of the song from the Internet, short press "RIGHT/LEFT" to zoom in and out the picture of the song.
- ⑤ Long press "Enter" key will pop up "Pair another device" and "iphone" (the name of the connected device), if you select "Pair another device", short press "Enter" key to confirm, the machine will disconnect the current device Connect and re-enter the pairing state. Long press the "Enter" key again, and "Pair another device" and "iphone" will pop up. If you select "iphone", short press the "Enter" key to confirm, and the machine will automatically connect to the "iphone" device.

UPnP function

inscabin IR-D8 can connect to a wireless network and use Windows operating system, Apple Mac or Linux music player as the playback platform, that is, UPnP sharing to play songs; take the Windows media player of the majority of users as an example, Windows Media Player 12 The supported playback formats are: MP3, WMA, AAC and WAV.

Open UPnP to share your music <Take Windows Media Player 12 as an example>

1. Open the built-in (or downloaded) Windows Media Player of the computer, and add your favorite music to the media library (how to use Windows Media Player to add music, please refer to Microsoft's media player instructions).
2. Click "Media Stream" in the Windows Media Player window, select "Automatically allow devices to play my media", and then accept "Automatically allow all computers and multimedia devices" to quickly turn on UPnP for music sharing and playback (as shown in the upper right).
3. You can also edit the name of the media stream and allow/block the device to play your music through UPnP. Click on the "Other Streaming Options" in the Windows Media Player window to customize the media library name (as shown in the figure below right) Point 1), so that users can quickly identify when IRD50BT searches for media devices; in the display device column, you can also customize whether to allow a specific device to play media stream music through UPnP (as shown in the figure on the right below) point).

[Note] It is recommended to replace the Chinese name with English for the name of the media stream to facilitate identification when selecting a device.

- ① Power on and press "MENU" to enter the main interface, select the "Media Center" icon, short press the "Enter" key to confirm, turn the SKIP+/- knob, select the "UPnP" item, and short press "Enter" to enter the UPnP mode. Rotate the SKIP+/- knob to select your UPnP device (for example, UPnP:KENT-PC:Kent Liu:), short

press the "Enter" key to confirm the selection.

[Note] It may take tens of seconds to search for UPnP devices. If inscabin IR-D8 does not find UPnP devices, the display will return to the "Media Center" menu.

② Select the music folder under the "UPnP:KENT-PC:Kent Liu:" device, short press the "Enter" key to confirm the operation, the screen will display the song name, turn the "SKIP+/- knob" to move up/down to select the song, Short press "Enter" to select a song to play.

③ When entering the interface of playing music, short press the "RIGHT" button to enlarge the song picture information, and short press the "LEFT" button to return. Turn the "SKIP+/- knob" to return to the song list interface, and short press the "Enter" key to play or pause.

④ Turn the "VOLUME+/- knob" to increase or decrease the volume. Short press the "MUTE" button to switch mute on/off.

U disk playback function

① Power on and press "MENU" to enter the main interface, select the "Media Center" icon, short press the "Enter" key to confirm, turn the SKIP+/- knob, select the "USB" item, and short press "Enter" to enter the USB mode.

② When the machine reads the USB flash drive, it will display the songs in the USB flash drive, short press the "RIGHT" key, the screen will display: Delete delete this song and Play play this song two options, short press the "Enter" key to confirm the required To operate, short press the "LEFT" button to return to the previous interface, turn the "SKIP+/- knob" to move to the song list, and short press the "Enter" button to play.

③ When entering the interface of playing music, short press the "RIGHT" button to enlarge the song picture information, and short press "LEFT" to return. Turn the "SKIP+/- knob" to return to the song list interface, and short press the "Enter" key to play or pause.

④ Turn the "VOLUME+/- knob" to increase or decrease the volume. Short press the "MUTE" button to switch mute on/off.

⑤ This machine supports a U disk with a capacity of 64G; supported audio formats: WAV, WMA, MP3, FLAC, AAC.

STANDBY mode

① Short press "STANDBY" key to enter standby or work mode. Standby mode can display time and weather.

a. There are two ways to display the standby time. Turn on and press the "MENU" button to enter the main menu, turn the "SKIP+/- knob" to move to "Configuration" and short press the "Enter" key to enter, and turn the "SKIP+/- knob" to move to "Time Display" and select, there are two options to choose from "Analog" and "Digital". The boot default is "Digital-White"

b. To display the weather, enter the "Configuration" interface and select "Weather", select "Show on Standby", and select "On". In the "Weather" interface, you can also select the weather of which place you want to enter the "Set Location" to select the weather forecast of your city.

Local Radio function

① Turn on and press the "MENU" key to enter the main menu and then turn the "SKIP+/- knob" to move to "Local Radio" and short press the "Enter" key to enter the "Local Radio" mode. The screen displays: Auto Detect (Country), Manual Setup (Country), Manual Setup (State), Manual Setup (City), Manual Setup (US Zip Code) five options, select Auto Detect (Country), short press "Enter" key to confirm, the machine will open the Internet radio folder option of your country.

② Select one of the folders, the screen displays the name of the Internet radio station of this folder, short press the "RIGHT/LEFT" button to enter the next interface or return to the previous interface, turn the "SKIP+/- knob" to move up/down to select the Internet radio station, Short press "Enter" key to play.

③ When entering the interface of playing music, short press the "RIGHT" button to enlarge the song picture information, and short press the "LEFT" button to return. Rotate the "SKIP+/- knob" to return to the song list interface, and short press the "Enter" key to exit or enter the Internet radio play. You can choose to play according to the Internet radio stations you like to listen to.

④ Long press the "PRESET" button to enter the radio station prestore interface, turn the "SKIP+/- knob" to move the prestore position forward or backward, and short press the "Enter" key to store the radio station to the current position. Short press the "PRESET" button to enter the tuning interface, turn the "SKIP+/- knob" to move the pre-stored position forward or backward, and short press the "Enter" key to recall the stored radio station for playback.

My mediaU function

① First, you have to register an account at <https://www.mediayou.net>, and log in successfully. Then click "Radio", output the name of the machine you want in the "Name your radio here" box, and enter the serial number in the "SERIAL NUMBER" box. How to get serial number (1. Turn on radio. Go to "Information Center", select "System Information" select "Wireless Info". 2. You'll find "MAC Address" serial number. You can choose you on this website "Favorite Station", "Favorite Location/Genre", "Local Radio(City)", "Manu-ally Add".

② Click "my mediaU" on the website to manage "Favorite Station", "Favorite Location/Genre", "Local Radio(City)", and "Manually Add".

③ Power on, short press the "MENU" button to enter "Configuration", select "Manage my mediaU" and then select "Enable". Enter "mediaU" on the machine and you can see your "Favorite Station", "Favorite Location/Genre", "Local Radio(City)", "Manually Add" on the website.

Alarm function

Time/calendar settings

① Power on and press "MENU" to enter the main menu, turn the "SKIP+/- knob" to move, short press "Enter" to enter the "Configuration" interface, select "Date&Time", and enter the "Date&Time" interface with three options.

a. Select "Set Date and Time". If it is connected to the network, you can select "Auto Detect" or set the time by yourself. Select "Manual Setup". Short press the "RIGHT/LEFT" button to move, and turn the "SKIP+/- knob" to change the time, Short press "Enter" key to confirm.

b. Select "Set Time Format", there are 12-hour system and 24-hour system to provide options.

c. There are three display modes for selecting "Set Date Format": YYYY/MM/DD, DD/MM/YYYY/MM/DD/YYYY. Display mode.

Alarm setting

① Power on and press "MENU" key to enter the main menu, turn "SKIP+/- knob" to move, short press "Enter" key to enter the "Configuration" interface, select "Alarm" to enter "Alarm" and there are two alarm clocks to choose from. Turn the "SKIP+/- knob" to move up and down, and short press the "SKIP+/- knob" to confirm.

② Select "Alarm1", select "Turn On" to enter the Alarm setting interface

a. Select "Repeat" to select "Everyday" "Once" "Mon" "Tue" "Wed" "Thu" "Fri" "Sat" "Sun".

b. Select "Time" and turn "SKIP+/- knob" to change the size of the alarm time, short press "RIGHT/LEFT" to move, and short press "Enter" to confirm.

c. Select "Sound" to select the sounds in "Beep", "Melody", "Interne dio", "FM", and "USB" for alarm. The default "Sound" is "Melody" when it is turned on.

③ You can also select "NAP Alarm", you can select "Turn On", "5 Minutes", "10 Minutes", "20 Minutes", "30 Minutes", "60 Minutes", "90 Minutes", and "120Minutes"

"120 Minutes", the alarm sound is Beep.

④ Select "Alarm Volume" and short press "RIGHT/LEFT" to increase or decrease the alarm sound.

⑤ When the alarm sounds, short press the "STANDBY" button to turn off the alarm, short press other buttons to enter snooze, the snooze time is 5 Minutes.

APP control

- ① For iPhone, search for "AirMusic Control" in "App Store" to download this APP.
- ② Download "AirMusic Control" from Anzhuo mobile phone
 - a. Short press the "MENU" button when power on, select "Configuration/Device/App"
 - b. Select "App" and scan the QR code that appears on the machine with your mobile phone.
- ③ The mobile phone can use the APP "AirMusic Control" to remotely control the machine by connecting the mobile phone to the same network as the machine.

Reset to Default

- ① Turn on the machine and press the "MENU" key to enter the main menu. Select "Configuration", select "Reset to Default", select "YES" and wait for a while to restore factory settings.

FCC Statement


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

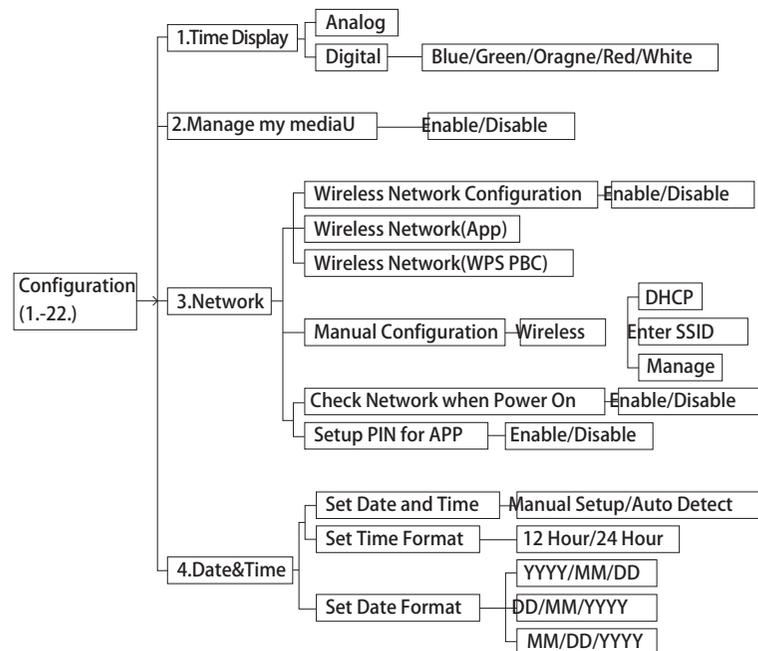

Configuration settings tree:

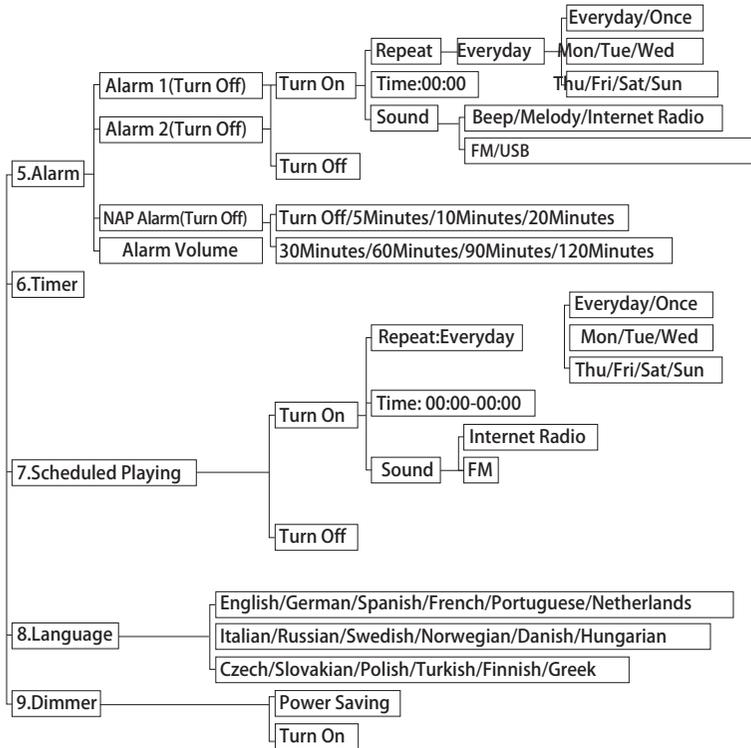

Configuration settings tree:

