

YORK[®] FITNESS

Owner's Manual

T800 Treadmill

Item #51144A



Table of contents

Congratulations on purchasing your exercise equipment from

YORK[®] FITNESS

You have chosen a high quality, safe and innovative piece of equipment as your training partner and we are certain it will keep you motivated on the way to achieving your personal fitness goals.

Please take the time to read this owner's manual as it will help you to get the most out of your new exercise equipment.

For more information visit www.yorkfitness.com.au



Protect the environment by not disposing of this product or batteries with household waste. Check your local authority for recycling advice and facilities.

CONTENTS

Safety information	03
Customer support	04
Exploded Drawing	05
Parts List	06
Hardware Comparison	08
Assembly Instructions	09
Safety Exercises	11
Computer Operation	12
Maintenance	18
Warranty	20

Safety information

Please read this instruction manual before you begin assembly. Great care has been taken to design these instructions and following them will help you with quicker assembly and minimize the risk of injury.

It is important that you keep these instructions for future reference.

This list is not exhaustive - You are responsible for your own safety

- Always assemble and operate the equipment on a level surface.
- Ensure the equipment is stable before use.
- Always ensure that the equipment has adequate space on each side.
- The safety level of this equipment can only be maintained if it is regularly examined for wear and tear.
- Replace defective components immediately and keep the equipment out of use until it is repaired.
- Use only the adjustment setting as described in the instructions. Always use the correct adjustment pin / fixing.
- Always check that any pins / fixings are tight and secure before use and after adjustment.
- Never leave any adjustment devices projecting from the equipment.
- Always consult your doctor before undertaking any exercise program.
- Always wear suitable clothing and footwear. (e.g. tracksuit / shorts / training shoes)
- Remove all personal jewellery before exercising.
- Ensure you warm-up well before using the equipment as this will help to prevent muscle strain.
- After eating, allow 1-2 hours before exercising as this will help to prevent muscle strain.
- Never overload the equipment. (See maximum user weight)
- Never use the equipment in any other manner other than the ways explained in these instructions and any wall-chart supplied.
- Injuries to health may result from incorrect or excessive training.
- Parents and others in charge of children should be aware of their responsibility, because the natural play instinct and the fondness of experimenting of children can lead to situations and behaviour for which the training equipment is not intended.

- The equipment is under no circumstances suitable as a children's toy.
- If children are allowed to use the equipment, their mental and physical development and above all their temperament should be taken into account. They should be controlled and instructed in the correct use of the equipment.
- Children should not be allowed on or around the equipment, especially when it is not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This product is not suitable for therapeutic purposes.
- This product has been tested for use in a home environment and is warranted for In Home, personal, family or household use.
- Due to our continuous policy of product development, York Fitness reserves the right to change specifications without notice.

CAUTION The instructions must be followed carefully in the assembly, use and maintenance of your equipment. The warranty does not cover damage due to negligence of the assembly, adjustment and maintenance instructions described herein.

Maximum user weight: 120kg

Safety Standards

This equipment meets the requirements of the EU's EMC and Low Voltage directives (where applicable), EN957 1 & 7 - CLASS HC. Therefore the equipment carries the following marks:



Customer support

Should you require any assistance regarding this product please gather the following information and then contact us using the details below:

- Serial No. - This can be found on the sticker.
- Original purchase date
- Place of purchase
- Information about the place and conditions of use
- Precise description of the issue / defect

Serial Number: -

IMPORTANT - Please retain your sales receipt, York Fitness Customer Care may request proof of purchase to validate eligibility for warranty service. Warranty cover starts from the date shown on the proof of purchase.


AUSTRALIA

The best way to contact us is via the website:
www.yorkfitness.com.au

York Fitness Australia
13/160 Hartley Road,
Smeaton Grange, NSW 2567
Tel: 1800 675 271
Email: sales@boylesfitness.com.au

York Fitness Service/Support/Spare Parts
162 Ipswich Road,
Rocklea, QLD 4108
Tel: 07 3272 7010
Email: spares@boylesfitness.com.au

Exploded Drawing

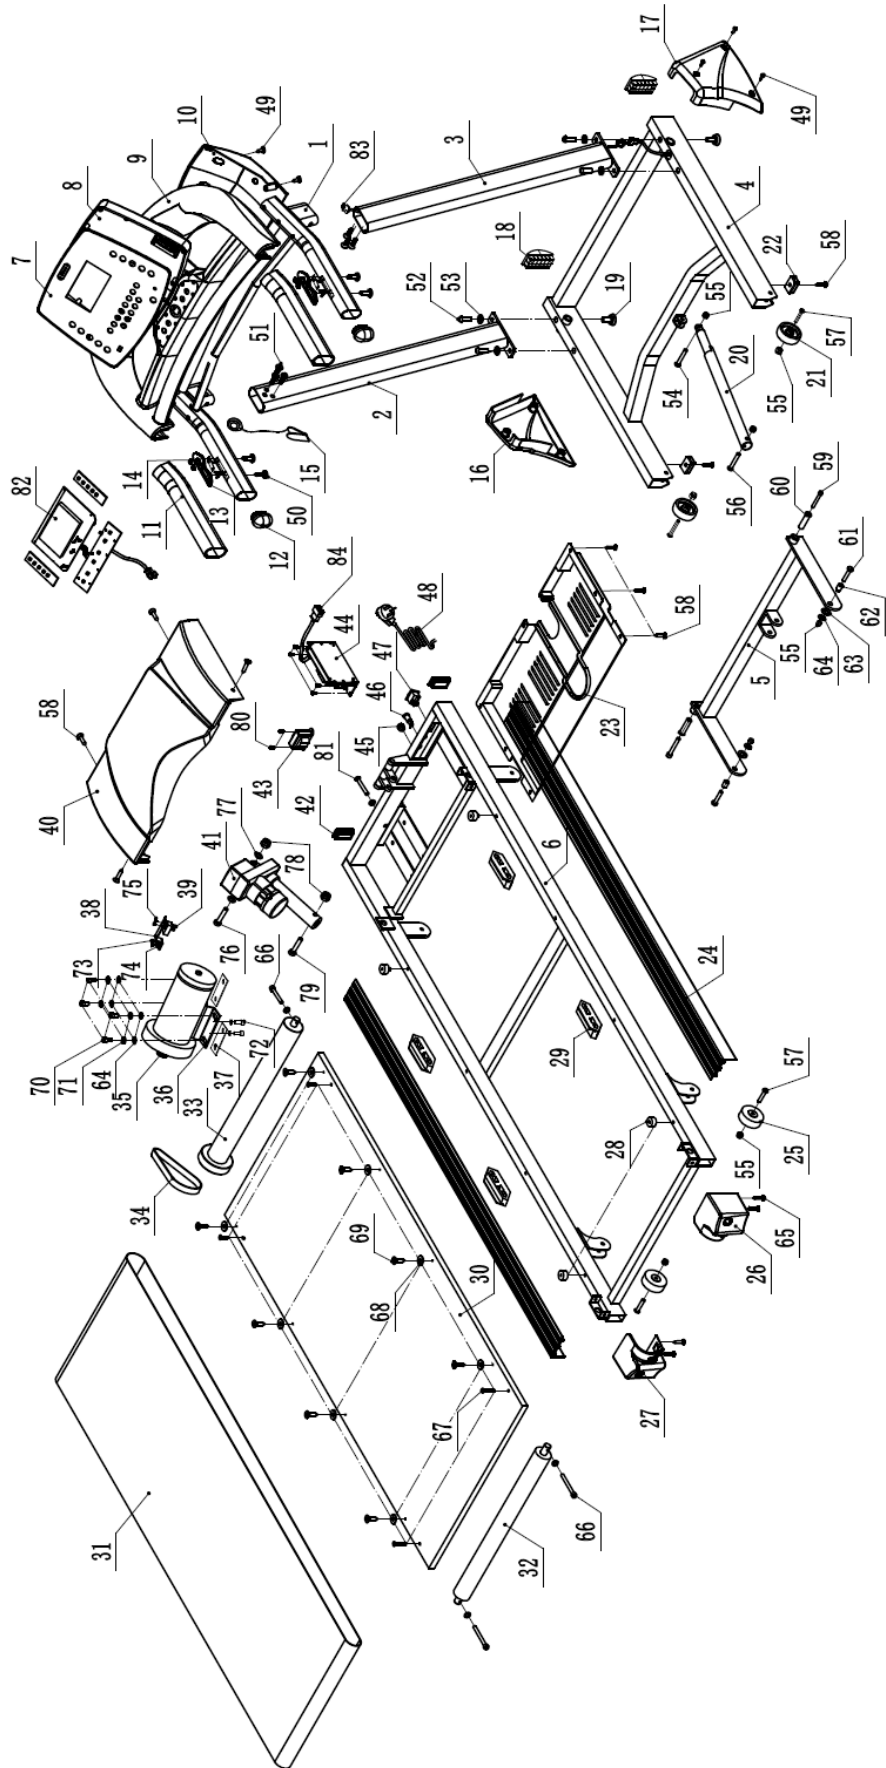

Parts List


PART NO	PART NAME	Q'TY
1	Computer frame	1
2	Left upright	1
3	Right upright	1
4	Base frame	1
5	Incline frame	1
6	Running platform	1
7	Computer panel	1
8	Down cover of Computer panel	1
9	Up cover of computer	1
10	Back cover of computer	1
11	Foam	2
12	30*60 Elliptical tube plug	2
13	Fixed base of shortcut key	2
14	Button of shortcut key	4
15	Safety key	1
16	Left protective cover of upright	1
17	Right protective cover of upright	1
18	40*80 Rectangle plug	2
19	Level frame	2
20	Damper	1
21	Move wheel	2
22	Rubber washer	2
23	Motor belly pan	1
24	Side rail	2
25	Supportive wheel of base frame	2
26	Right end cap	1
27	Left end cap	1
28	Fix cushion of running deck	4
29	Cushion of motor	4
30	Cushion of running deck	1
31	Running belt	1
32	Rear roller	1
33	Front roller with fly wheel	1
34	Motor belt	1
35	Motor	1
36	Motor frame	1
37	Cushion of motor	2
38	Frame of speed sensor	1
39	Speed sensor	1
40	Motor cover	1
41	Incline motor	1
42	50*25 Rectangle tube plug	2
43	Transformer	1

44	Motor control board	1
45	Cushion of power cord	1
46	Fuse	1
47	Power switch	1
48	Power wire	1
49	4.2*15 Screw	16
50	4.2*60 Screw	4
51	M8*20 Allen head bolt	6
52	M10*20 Allen head bolt	4
53	Φ10 Washer	4
54	M8*35 Allen head bolt	1
55	M8 Nylon nut	7
56	M8*45 Allen head bolt	1
57	M8*40 Allen head bolt	4
58	4.8*15 Screw	11
59	M8*50 Allen head bolt	2
60	φ13 Connective shaft sleeve of running platform	2
61	M8*25 Bolt	2
62	φ12 Connective shaft sleeve	2
63	φ10 Plastic washer	2
64	φ8 Washer	15
65	4.2*15 Screw	4
66	M8*65 Allen head bolt	3
67	M6*40 Allen head bolt	4
68	Side rail cushion	8
69	4.2*15 Screw	8
70	M8*20 Bolt	4
71	Φ8 Spring washer	6
72	M8*20 Allen head bolt	2
73	Φ5 Washer	2
74	M5*10 Bolt	2
75	2.9*6 Screw	2
76	M10*50 Allen head bolt	1
77	Φ12 Plastic washer	2
78	M10 Nylon nut	2
79	M10*60 Allen head bolt	1
80	4.2*12 Screw	6
81	M8*60 Allen head bolt	1
82	Computer display board	1
83	Control wire of upright	1
84	Control wire of base frame	1

Hardware Comparison Chart


For your convenience, we have identified the hardware used in the assembly of this product. The chart below is provided to help you to identify items that may be unfamiliar to you.

NO.	DESCRIPTION	Q'TY
49	4.2*15 Screw	6
51	M8*20 Allen head bolt	6
52	M10*20 Allen head bolt	4
53	Φ10 Washer	4
A	5mm SOCKET HEAD WRENCH	1
B	6mm SOCKET HEAD WRENCH	1
C	SCREWDRIVER	1
D	LUBRICANT	1

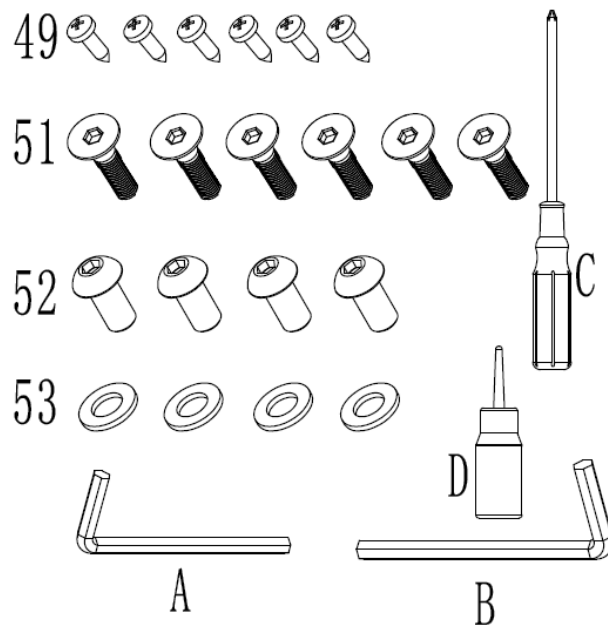


Assembling Instructions

WARNING: Please put on all the screws, washers and bolts then tighten them.

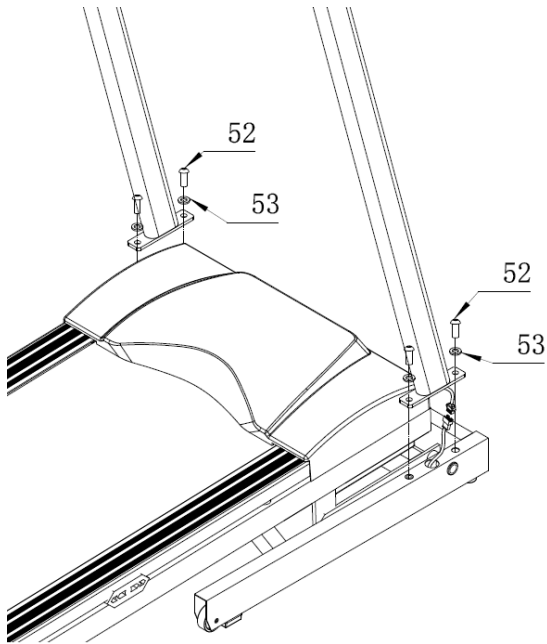


STEP1:


1. First make sure to connect the Emergency Wires.
2. Then fix the uprights (2, 3) on the base frame 4 with M10*20mm Allen head bolt 52, Φ10 Washer 53.

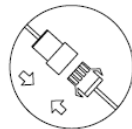

ENSURE PINS ARE STRAIGHT




ATTENTION: Be careful when you connect the two console-controller wires. There are pins inside connector, the pins must be straight, and otherwise it will cause problems.

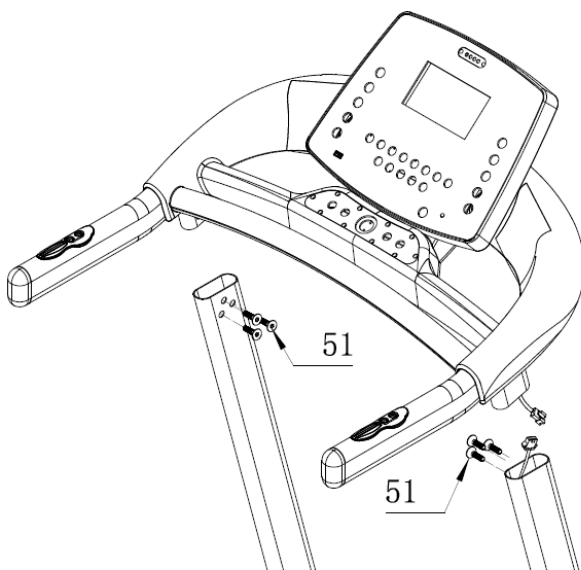


STEP2:

1. First make sure to connect the Computer Control wire and Control wire of upright.
2. Then fix the computer on the uprights with M8*20mm Allen head bolt 51.

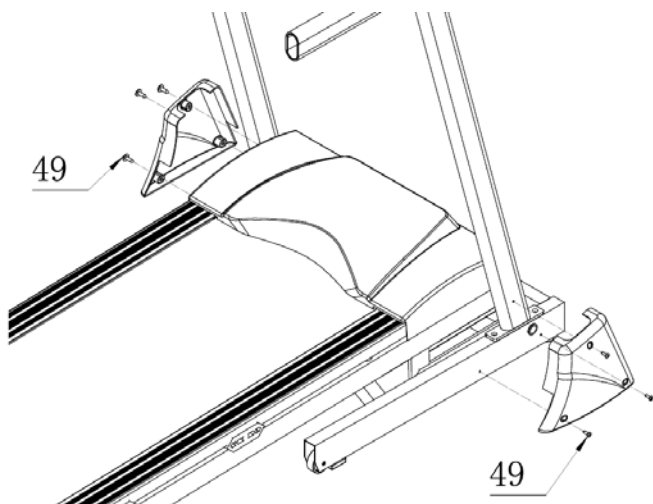

STEP3:


Fix the protective cover of uprights (16, 17) to the base frame with ST4.2*15 Screw 49

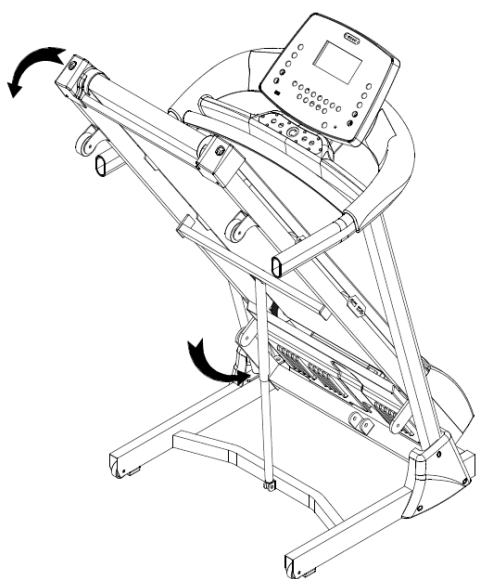

Unfolding Illustration:

To unfold the treadmill:

1. Strike the damper by feet. (as shown by the arrow on the left side).
2. Hold the top end covers (as shown by the arrow on top left) and pull the treadmill slowly down onto the ground.

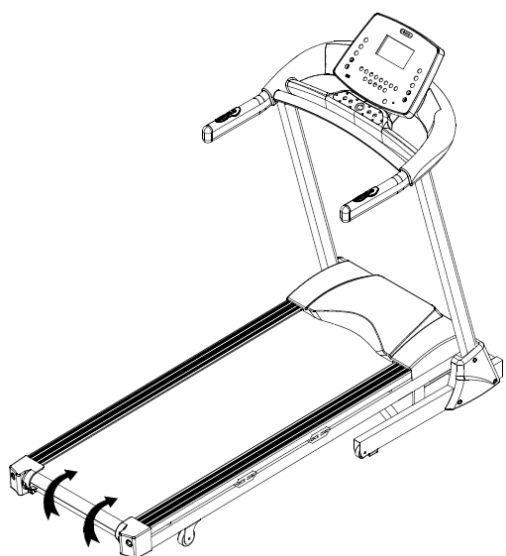


Folding Illustration:

To fold up treadmill:


Both hands hold on the bottom end covers and lift up the treadmill

Safety Exercises

Do some warm-up exercise before use; you'll get twice the result with half the effort. Such as follows:

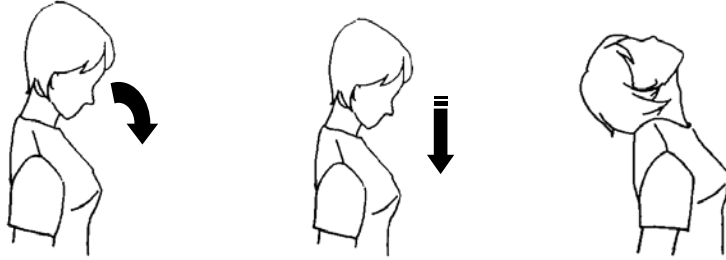

Extend the neck up and down

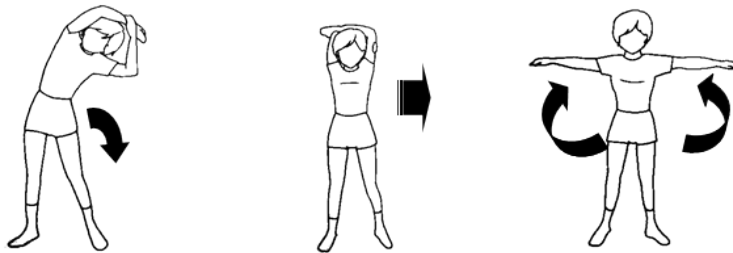


Twist the waist left and right




Level push forwards




Upright straighten one's back

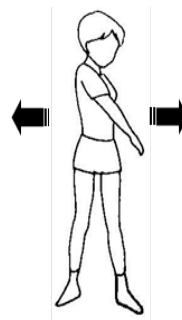

Left & right poise



Up & Down Extend

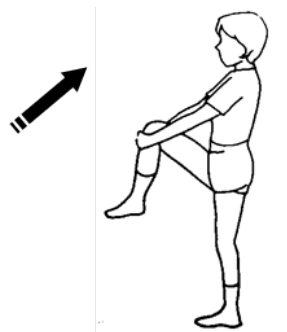

Thigh Extend



Calf Extend

Computer Operation

Panel Layout



The Operation

The required main power is 220~240VAC.

Operation Instructions

KEY INSTRUCTION:

- START: Press "START" key to start the treadmill
- STOP: Press "STOP" key to pause or stop the treadmill (Press it for two seconds to stop the treadmill but press it in two seconds to pause the treadmill.).
- MODE: In the waiting mode, press "MODE" key to change NORMAL MODE- TIME MODE-DISTANCE MODE-CALORIESMODE-P1.....P12-HRC65%-HRC85%-USER1-USER2-USER3-USER4- NORMAL MODE
- SPEED+: When the motor is running, the speed will increase 0.1km/h. Press and the speed will increase quickly. In the waiting state, the setting value of the flashing place will increase. Press and the setting value of the flashing place will increase quickly.
- SPEED -: When the motor is running, the speed will decrease 0.1km/h. Press and the speed will decrease quickly. In the waiting mode, the setting value of the flashing place will decrease, press and the setting value of the flashing place will decrease quickly.
- ENTER: the enter key of USER,HRC Mode
- INCLINE +: When the motor is running, the incline will increase 1%. In the USER mode, press it to increase the incline value 1%
- INCLINE - : When the motor is running, the incline will decrease 1%. In the USER mode, press it to decrease the incline value 1%.
- SPEED HOTKEY: 3KM ,5 KM ,7 KM ,10 KM , 13 KM
- INCLINE HOTKEY: 3%, 6%, 9%, 12%, 15%.
- Audio: MP3 ON/OFF.

MANUAL MODE

Waiting mode:

- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.

Display window

- TIME window: Display time value.
- DISTANCE window: Display distance value.
- PROG window: Display program diagram, in user mode, display user program diagram.
- SPEED window: Display speed value.
- CALORIES window: Display calories value.
- PULSE window: Display pulse value (Display HP when there is no pulse).
- MP3 window: Displays ON/OFF of MP3 power.

Running mode

- Press "SPEED+/SPEED-" key to set the speed of 0.8-16.0km/h.
- Press "INCLINE+/INCLINE-" key to set the incline of 0-18%.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds. In the running mode.

Press "STOP" key, Press it for two seconds to stop the treadmill but press it in two seconds to pause the treadmill. Press "STOP" key for two seconds, all of value is zero and return to the waiting mode

COUNTDOWN MODE

Waiting mode

- In the waiting mode, press "MODE" key to change NORMAL MODE- TIME MODE-DISTANCEMODE-CALORIESMODE-P1.....-P12-HRC65%-HRC85%-USER1-USER2-UR3-USER4-NORMAL MODE

Time mode

- The default time is 30 minutes.
- Press "SPEED+/SPEED-" key to adjust the target time of 10: 00 - 99:00.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.

Distance mode

- The default distance is 5.0 km.
- Press "SPEED+/SPEED-" key to adjust the target distance 1.0 km - 999.0 km.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.

Calories mode

- The default calorie target is 100 calories.
- Press "SPEED+/SPEED-" key to adjust the target calories 100 calories - 999.0 calories.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.

Display window

- TIME window: Display time value.
- DISTANCE window: Display distance value.
- PROG window: Display program diagram, in user mode, display user program diagram.
- SPEED window: Display speed value.
- CALORIES window: Display calories value.
- PULSE window: Display pulse value (Display HP when there is no pulse).
- MP3 window: Displays ON/OFF of MP3 power.

Running mode

- Press "SPEED+/SPEED-" key to set the speed of 0.8-16km/h.
- Press "INCLINE+/INCLINE-" key to set the incline of 0-18%.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.

Press "STOP" key, Press it for two seconds to stop the treadmill but press it in two seconds to pause the treadmill. Press "STOP" key for two seconds, all of value is zero and return to the waiting mode

PROGRAM MODE

Waiting mode

- In the waiting mode, press "MODE" key to change NORMAL MODE- TIME MODE-DISTANCE MODE-CALORIES MODE-P1.....-P12-HRC65%-HRC85%-USER1-USER2-UR3-USER4- NORMAL MODE
- The default time is 30 minutes.
- Press "SPEED+/SPEED-" key to adjust the target time of 10:00-99:00.
- Press ENTER to confirm the target time.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.

Display window

- TIME window: Display time value.
- DISTANCE window: Display distance value.
- PROG window: Display program diagram, in user mode, display user program diagram.
- SPEED window: Display speed value.
- CALORIES window: Display calories value.
- PULSE window: Display pulse value (Display HP when there is no pulse).
- MP3 window: Displays ON/OFF of MP3 power.

Running mode

- Press "SPEED+/SPEED-" key to set the speed of 0.8-16km/h.
- Press "INCLINE+/INCLINE-" key to set the incline of 0-18%.
- Press "START" key, the treadmill will enter the running mode after the countdown of 3 seconds.
- Press "STOP" key, Press it for two seconds to stop the treadmill but press it in two seconds to pause the treadmill. Press "STOP" key for two seconds, all of value is zero and return to the waiting mode
- There is BBB sound when we change every segment in the PROGRAM mode.
- Computer will set time for every segment according to user's setting time

USER MODE

Waiting mode

- Press MODE key to select TIME MODE→DISTANCE MODE→CALORIES MODE→P1..... →P12→ HRC 65%→HRC 85%→USER 1→USER 2→USER 3→USER 4→ USER 5→BODY FAT MODE→MANUAL MODE. The select mode will flash or LED flash.
- Select U1~U4
- The default time of USER is 30 minutes.
- Press SPEED+/SPEED- key to adjust the target time of 10:00-99:00.
- Press ENTER key to enter every segment for setting, Press SPEED+/- to adjust speed.
- Press ENTER key again, then press SPEED+/- to adjust incline.
- Press ENTER key every time to store the last setting value of level and enter the next setting value of level.
- Press START key to enter running mode after 3 seconds count down.

Display window

- TIME window: Display time value.
- DISTANCE window: Display distance value.
- PROG window: Display program diagram, in user mode, display user program diagram.
- SPEED window: Display speed value.
- CALORIES window: Display calories value.
- PULSE window: Display pulse value (Display HP when there is no pulse).
- MP3 window: Displays ON/OFF of MP3 power.

RUNNING MODE

- Press SPEED+/SPEED- to set speed value of 0.8~16.0km/hr.
- Press INCLINE+/- key to adjust incline value +/- (0-18%)
- Press START key to start the treadmill after the countdown of 3 seconds.
- Press STOP key for 2 seconds to stop the treadmill but press it in two seconds to pause the treadmill.
- When change the level, there will be a warning sound.
- Change the level according to the setting of time.

Other Instruction

- In case of accident in the running state, please press STOP key for two seconds, the treadmill will stop and the incline will return to zero
- In the running state, pull out the safety key, the treadmill will stop and display "-----".
- When there is ERROR, It will display ERROR MESSAGE NUMBER
- When change the level, there is a warning sound, except in the PROGRAM MODE and USER MODE.

Display Range

	Initial value	Setting value	Display range
TIME(MM:SS)	0:00	10:00~99:00	0:00~99:59
SPEED (km/h)	0.0	N/A	0.8~16.0
DISTANCE (kmh)	0.0	1.0~99.9	0.0~999.9
PULSE (bpm)	HP	N/A	40~199
CALORIES (calories)	0	100~999	0~9999
INCLINE	0	N/A	0-18
AGE	25	10~100	10~100

Program

Speed	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
1	2	2	3	1	1	1	1	3	1	1	1	2
2	3	2	3	5	1	1	3	3	1	1	1	2
3	3	4	3	9	5	9	5	3	1	1	1	2
4	4	4	5	1	5	9	7	9	3	3	1	5
5	4	6	7	5	1	9	9	9	3	3	1	5
6	5	6	9	9	1	1	1	3	3	3	3	5
7	5	8	11	1	9	1	3	3	3	5	3	5
8	6	8	9	5	9	9	5	3	1	5	3	7
9	6	8	7	9	1	9	7	9	1	5	3	7
10	7	10	5	1	1	9	9	9	1	5	3	7
11	7	10	3	5	5	1	1	3	5	7	3	7
12	8	10	5	9	5	1	3	3	5	7	3	7
13	8	12	7	1	1	9	5	3	5	7	9	9
14	9	12	9	5	1	9	7	9	5	7	9	9
15	9	12	11	9	9	9	9	9	5	10	9	9
16	8	12	9	1	9	1	1	3	1	10	9	9
17	8	12	7	5	1	1	3	3	1	10	9	7
18	7	10	5	9	1	9	5	3	1	10	9	7
19	7	10	3	1	5	9	7	9	9	5	9	9
20	6	10	5	5	5	9	9	9	9	5	9	9
21	6	8	7	9	1	1	1	3	9	5	9	9
22	5	8	9	1	1	1	3	3	9	7	9	7

23	5	8	11	5	9	9	5	3	9	7	7	7
24	4	6	9	9	9	9	7	9	9	7	7	7
25	4	6	7	1	1	9	9	9	1	7	7	5
26	3	6	5	5	1	1	1	3	1	5	7	5
27	3	4	3	9	5	1	3	3	1	5	7	5
28	2	4	3	1	5	9	5	3	1	5	7	5
29	2	2	3	5	1	9	7	9	1	1	7	2
30	2	2	3	9	1	9	9	9	1	1	7	2

Incline	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12
1	1	7	2	2	2	2	2	2	2	2	2	1
2	1	7	2	2	3	2	2	2	2	2	3	1
3	1	6	3	3	4	3	2	4	6	2	4	2
4	2	6	4	3	5	3	2	4	6	3	5	2
5	2	5	5	2	3	2	4	2	6	3	4	2
6	2	5	6	2	4	2	4	2	6	3	3	3
7	3	4	6	3	5	3	4	4	6	4	2	3
8	3	4	5	3	6	3	4	4	6	4	3	3
9	3	3	4	2	4	2	6	6	5	4	4	4
10	3	3	3	2	5	2	6	6	5	5	5	4
11	4	2	2	3	6	3	6	4	5	6	6	4
12	4	2	3	3	7	3	6	4	4	7	5	5
13	4	3	4	2	5	4	8	2	4	8	4	5
14	5	3	5	2	6	4	8	2	4	9	3	5
15	5	4	6	3	7	5	8	4	3	9	2	5
16	5	4	6	3	8	5	8	4	3	10	3	4
17	5	3	5	2	7	6	6	6	2	9	4	4
18	4	3	4	2	6	6	6	6	2	8	5	4
19	4	2	3	3	5	7	6	8	3	7	6	5
20	4	2	2	3	4	7	6	8	3	6	7	5
21	3	3	3	2	6	6	4	6	4	5	6	4
22	3	3	4	2	5	6	4	6	4	5	5	4
23	3	4	5	3	4	5	4	4	3	4	4	4
24	3	4	6	3	3	5	4	4	3	4	3	3
25	2	3	6	2	5	4	2	2	2	3	2	3
26	2	3	5	2	4	4	2	2	2	3	3	3
27	2	2	4	3	3	3	2	4	3	2	4	2
28	1	2	3	3	2	3	2	4	3	2	3	2
29	1	1	2	2	1	3	2	2	2	1	2	2
30	1	1	2	2	1	3	2	2	2	1	2	2

Error Message

Error	Specification	Treatment	Further treatment
Er1	Connection error between panel and controller	Check that the lines between panel and controller are connected.	Replace the lines
			Replace the device
			Replace the panel
			Replace the transformer
Er2	Error on motor/MOS crash	Check that the line to motor is connected.	Replace the device
			Replace the motor
Er3	Error on speed sensor line/Walking belt not working	Check that the walking belt is secure and not loose.	Replace the speed sensor line
		Check that the speed sensor line is connected.	Replace the device
		Check the placement of sensor or the photo disk is correct.	
Er4	Binding of RELAY		Replace the device
Er5	Over the current	Check the loading.	Replace the device
Er6	The speed is too fast or too slow		

Maintenance

Proper maintenance is very important to ensure your treadmill is always in top working condition. Improper maintenance could cause damage or shorten the life of your treadmill and exceed the LIMITED WARRANTY coverage.

1. **Important:** Never use abrasives or solvents to clean the treadmill. To prevent damage to the computer, keep liquids away and keep it out of direct sunlight.
2. Inspect and tighten all parts of the treadmill regularly. Replace any worn parts immediately.

Cleaning:

Routine cleaning of your treadmill will extend the product's life.

1. **Warning:** To prevent electrical shock, be sure the power to the treadmill is OFF and the power cord is unplugged from the wall electrical outlet before attempting any cleaning or maintenance.
2. **Important:** Never use abrasives or solvents to clean the treadmill. To prevent damage to the computer, keep liquids away and keep it out of direct sunlight.
3. **After each workout:** Wipe off the console and other treadmill surfaces with a clean, water dampened soft cloth to remove excess perspiration
4. **Weekly:** Use of a treadmill mat is recommended for ease of cleaning. Dirt from your shoes contacts the belt and eventually makes it to underneath the treadmill. Vacuum the underneath treadmill regularly.

Belt Adjustment:

Belt adjustment and tension performs two functions: adjustment for tension and centering. The running belt has been adjusted properly at the factory. However transportation, uneven flooring or other unpredicted reasons could cause the belt to shift off center resulting in the belt rubbing with the plastic side rail or end caps and possibly causing damage. To adjust the belt back to its proper position please follows the directions below:

1. Walking belt has shifted to the left:

First unplug the power cord from the surge protector. Using the hex key provided, turn the left rear roller adjustment bolt 1/4 turn in the clockwise direction. Plug the power cord back into the surge protector and run the treadmill at 2.5 kph. You should see the belt start to correct itself, moving back towards the center. Repeat the above procedure until the walking belt is centered. It may be necessary to set walking belt tension once you have completed this procedure if the belt feels like it is slipping while walking. Refer below to the "Walking belt slipping" instructions.


2. Walking belt has shifted to the right:

First unplug the power cord from the surge protector. Using the hex key provided, turn the right rear roller adjustment bolt 1/4 turn in the clockwise direction. Plug the power cord back into the surge protector and run the treadmill at 2.5 kph. You should see the belt start to correct itself, moving back towards the centre. Repeat the above procedure until the walking belt is centered. It may be necessary to set walking belt tension once you have completed this procedure if the belt feels like it is slipping while walking. Refer below to the "Walking belt slipping" instructions.

3. Walking belt is slipping:

First unplug the power cord from the surge protector. Using the hex key provided, turn both the left and right rear roller adjustment bolts the same distance, usually a 1/4 turn in the clockwise direction. Plug the power cord back into the surge protector and run the treadmill at 2.5 kph. You should now walk on the belt to determine if the belt is still slipping. Repeat the above procedure until the walking belt is not slipping. The tension should be just tight enough not to slip

WARNING! Do not over tighten rollers! This will cause premature roller bearing failure!

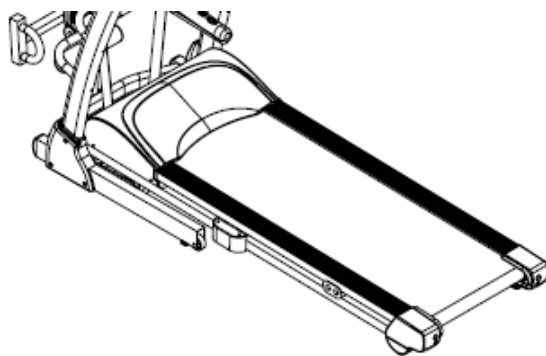

Right and left Allen bolts are located at the rear of the treadmill.

Deck Lubrication:

The walking belt has been pre-lubricated at the factory. However, it is recommended that the walking board be checked periodically for lubrication to ensure optimal treadmill performance.

Every 3 months of operation lift the sides of the walking belt and feel the top surface of the walking board as far as you can reach. If you feel signs of silicone, no further lubrication is required. If it feels dry to the touch, follow the instructions below.

Please use Lube 'N Walk, which can be purchased from www.yorkfitness.com.au

Frequency of use Lubricant:

1, commercial gymnasium:

Every day uses about for 12 hours, 20 day replenishment 1 lubricating oil, each time 20 millilitres.

Every day to use about for 8 hours, 20 day replenishment 1 lubricating oil, each time 20 millilitres

Every day to use about for 4 hours, 1 month replenishment 1 lubricating oil, each time 20 millilitres

2, home use:


Every day use for 1 hour and above, every 30 day replenishment 1 lubricating oil, each time 10-15 milliliter.

Every day uses within for 30 minutes above, 1 hour 2 month replenishment 1 lubricating oil, each time 10-15 milliliter.

Every day use for 30 minutes and under, 2 month replenishment 1 lubricating oil, each time 10-15 milliliter.

TO APPLY LUBRICANT TO THE WALKING BELT

1. Position the walking belt so that the seam is located on top and in centre of the walking board.
2. Insert the spray nozzle into the spray head of the lubricant can.
3. While lifting the side of the walking belt, position the spray nozzle between the walking belt and the board approximately 6" from the front of the treadmill. Apply the silicone spray to the walking board, moving from the front of the treadmill to the rear. Repeat this on the other side of the belt. Spray approximately 4 seconds on each side.
4. Allow the silicone to "set" for 1 minute before using the treadmill.

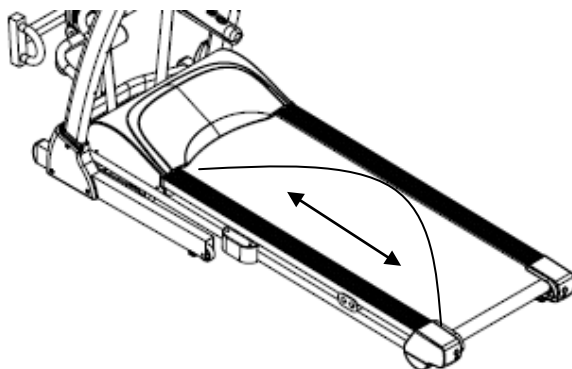

NOTE: When the treadmill is overload for safety reasons, the fuse will be broken and the power will be cut off. Change a new fuse and start again.

BFE Warranty Policy – November 1st 2013

1. When purchased from an authorized BFE distributor the BFE warranty shall guarantee that all framework and components of your product are free from faulty manufacture. All faulty framework and components will be repaired or replaced as set out in this policy. All warranties in this policy apply to INDOOR HOME/DOMESTIC USE ONLY.
2. These warranties do not apply to products used in commercial use applications.
3. Warranty DOES NOT cover normal wear & tear and excludes faults due to misuse, abuse, incorrect assembly or lack of general maintenance.
4. Warranty is applicable to products sold and placed within Australia only.
5. IMPORTANT. Most of BFE products are pretested and we have inspectors checking all products prior to shipment. The number one reason for a fault is due to INCORRECT ASSEMBLY.
If you do have problems please go back to the start and double check your assembly and pay special attention to all WIRING connections. If you have accidentally cut or damaged the wiring please let us know and we will be happy to send you a new set at no-charge.

If you have done this and are confident you have double checked your assembly and are still having problems please email our service department at spares@boylesfitness.com.au including your best contact details ,proof of purchase, serial number and a brief explanation of what is wrong.

Emailing is the quickest and most reliable way to get your service request processed. Once we have your details we will either call or email you back with the next steps. The quickest way, once we determine the problem and send you a replacement part, is that we can talk you through over the phone on how to fit it.

If it is deemed by our service tech that it is too difficult, we can arrange (where available) a service technician.

NOTE. If we arrange for a service technician (where applicable) and it is found that it is not a manufactures fault and found to be an assembly issue , normal wear and tear, transport damage or misuse then there will be a call out fee. (Surcharge applies for non-metro areas)

WARRANTY TERMS- Warranty commences from the date of purchase from the retail store. Warranty only applies to the original purchaser and is NON transferable. Warranty is void if the serial number of the product has been removed or tampered with.

Warranty does not apply to defects, faults or failures due to:

- (a) Defects caused during assembly or failure to assemble to the assembly manual provided. Assembly errors include but are not limited to damaged wiring harnesses, stripped crank arms and or pedals and bolts used in the wrong locations.
- (b) Lack of general maintenance and or failure to service or maintain the equipment in accordance with the user manual specifications and recommendations.
- (c) Power Surges. The computers, control boards and motors are very sensitive to power fluctuations. You must use a surge protector on all items that plug into your mains power otherwise your electronics will not be covered by this warranty. You can purchase these from numerous retailers.
- (d) User negligence, abnormal or excessive use, misuse, abuse or transport damage.
- (e) Repairs, alterations or modifications by NON BFE authorized service technician.
- (f) Accident, fire, flood or malicious damage by third person.
- (g) Ordinary wear and tear.
- (h) Failure to keep the product in a clean, dry environment causing rust. You should wipe off any sweat and moisture after each training session.
- (i) Any products sold or placed in an application or the incorrect environment that is not recommended by BFE or as not stipulated in the owner's manual such as a commercial / rental environment will void the warranty set forth by BFE

BFE will have the option to repair or replace any product which requires attention under the warranty.

NOTE: Lifetime refers to the warranty coverage of the units expected service life. NOT the lifetime of the purchaser.

Servicing/Spare Parts - As with any mechanical equipment general maintenance should be performed on a regular basis by an authorized retailer or service technician. This will ensure longevity of the product and ensure that it is kept working in optimum condition. Failure to properly maintain your equipment may lead to safety issues and may also void the warranty.

You should only use genuine BFE replacement parts otherwise the warranty will be void.

Freight Costs:

The cost of freighting the replacement part under warranty to the customer shall be free of charge. Your requirement is to return the faulty part via post to the return address.

Returned Goods:

The unauthorized return of parts or product shall be refused and placed in the hands of the carrier at the cost of the shipper. Return authorizations can be obtained from BFE head office only.

Service Department hours: Monday to Friday between 9.00am and 4pm

Service Phone Number: 07 3272 7010

PLEASE NOTE: that Authorized service technicians do not reside in all areas of this vast country. If you live beyond the reasonable service area of a metropolitan area, BFE may not be able to support the labour portion of the product warranty. Alternatively you can return (at your cost) your product to the closest BFE repair centre, where it will be fixed at no charge under the warranty period.

Metropolitan Area- defined as no more that 50km from G.P.O in all capital cities.

Disclaimer:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a 'Major failure' and for compensation for any other Reasonable foreseeable loss or damage.

You are also entitled to have goods repaired or replaced if the goods fail to be of an acceptable quality and the failure does not amount to a major failure.

BFE does not assume, nor authorize any representative or other person to make or assume for BFE, any warranties whatsoever, whether expressed or implied, in connection with the sale, service, or shipment of our products.

BFE reserve the right to make changes and improvements in our products and specifications without incurring any obligation to similarly alter products previously purchased.

This warranty operates in addition to other rights and remedies available to consumer's rights under the Australian Consumer Law.



YORK[®]
FITNESS

www.yorkfitness.com.au